

Instructions for Martian Saucer Topper Kit:

Installation Instructions are included for:

AFMr Martian Saucer Topper Kit for Classic and Special Edition CGC Remakes

Note: For the Original Bally AFM, email for special instructions at:

© 2021 Mick Rogala mrogala1@comcast.net <http://mickspinball.com>

All components were inspected and tested before shipping.

Martian Saucer Installation Kit

Kit comes fully assembled and includes:


- Martian
- Saucer
- Wiring Harness
- Base
- Velcro stick-on circles




Kit size if 4" High by 4" Wide.

INSTRUCTIONS

1. Shut power off on AFM Pinball machine.
2. Remove back glass and rest on cabinet.
3. Lift and remove plastic hole cover from top of back cabinet.

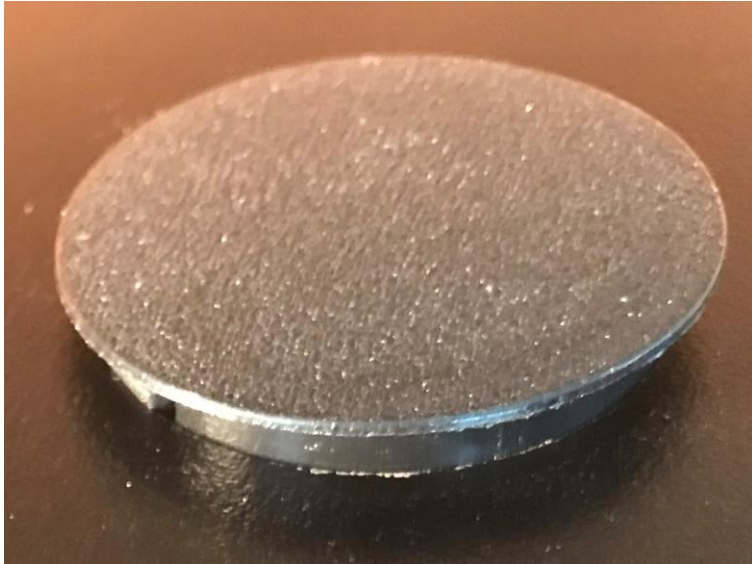

4. Insert wiring harness into back cabinet through hole on top of back cabinet.

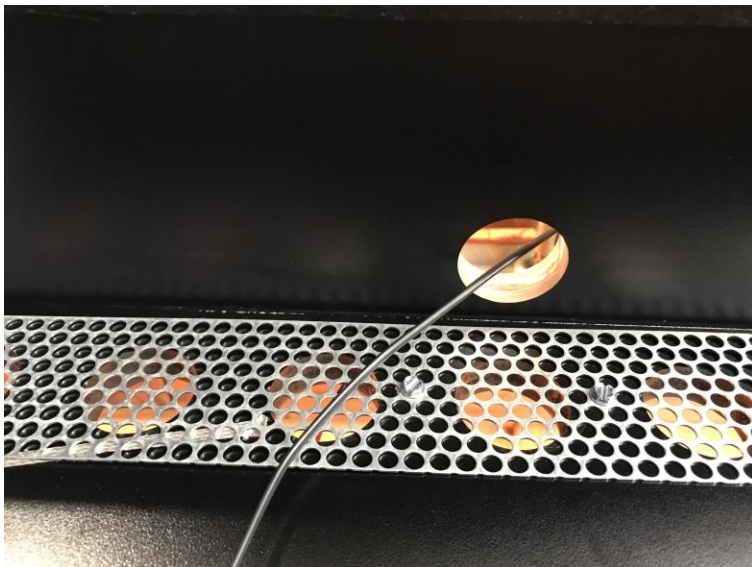


5. Clean top of Back Cabinet

6. Peel plastic cover from each of 3 Velcro fasteners attached to bottom of Martian Saucer base.



7. Plug Molex connector into left 3 positions of J109 socket, ensuring that the **Red** wire goes to Pin number one. The J109 socket is located at the bottom left of the solenoid power circuit board in the Back Cabinet.

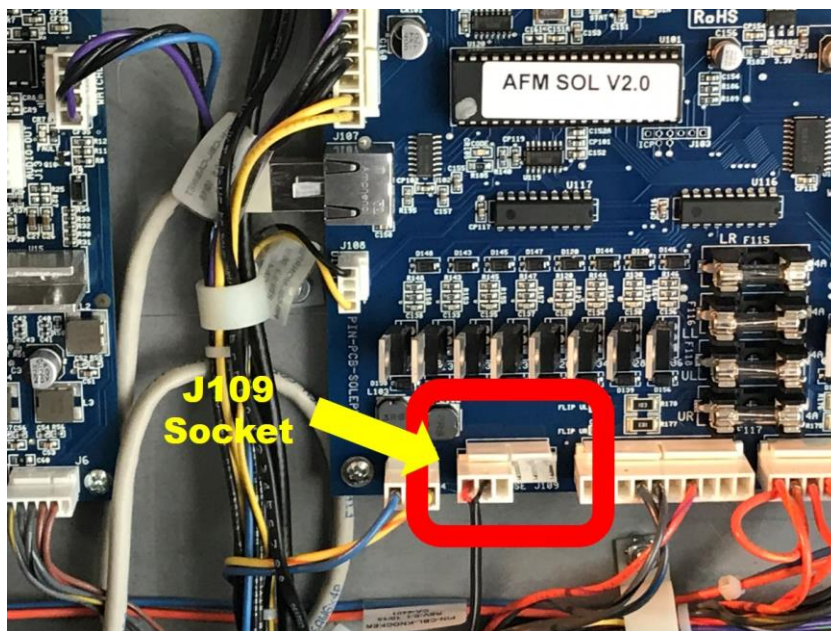

8. Tuck excess wiring into existing wiring harness as shown above.
9. Re-attach back glass.
10. Done, enjoy!

Please contact me with any questions you may have.

Thank you, Mick Rogala

<http://mickspinball.com>